Quick Setup Guide

To register this product please visit
www.samsung.com/register.

List of Parts

✎ The accessories may differ depending on the model.

1. Remote Control & Batteries (AAA x 2)
2. Power Cord
3. Data Cable
4. • Owner's Instructions
   • Safety Guide
5. Guide Stand
6. Screws
7. Stand
8. Holder-Wire Stand

BN68-04283A-02

Installing the LED TV Stand

The 80 cm and larger LED TVs have swivel stands. You can set these stands so that the TVs swivel 20 degrees left and right or 90 degrees left and right. The 60 cm LED TVs do not have swivel stands.

Stand Components

When installing the stand, use the provided components and parts.

The accessories may differ depending on the model.

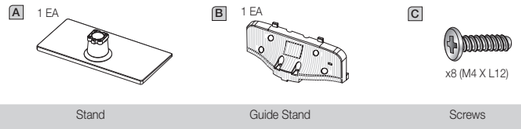

Stand	Guide Stand	Screws

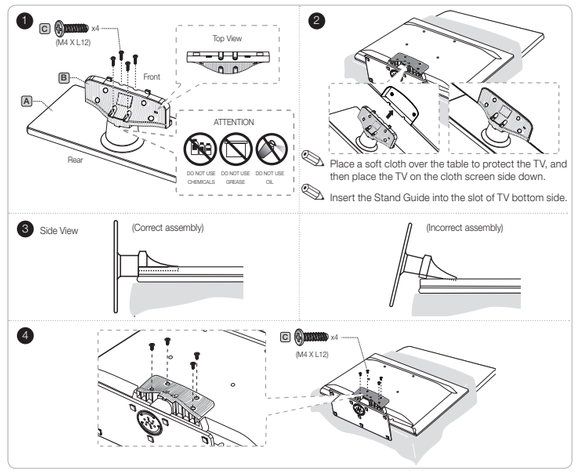

Installing the Wall Mount Kit

Wall mount items (sold separately) allow you to mount the TV on a wall. For detailed information on installing the wall mount, see the instructions provided with the Wall Mount items. Contact a technician for assistance when installing the wall mounted bracket. Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you select to install the TV on your own.

Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

Viewing the Connection Panel

➢ The product color and shape may vary depending on the model.

HG22EA470UW
HG22EA473KA

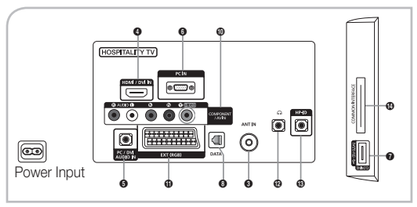

HG26AA475RW
HG32AA475RW
HG40AA570LW
(The models of supporting SCART)

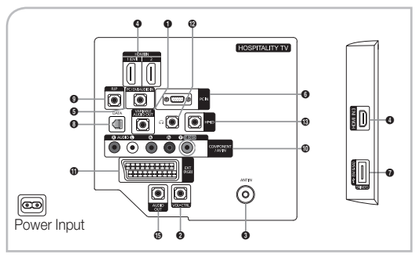

HG26AA470PW
HG32AA470PW
HG32AA570LW
HG40AA570LW
(The models of not supporting SCART)

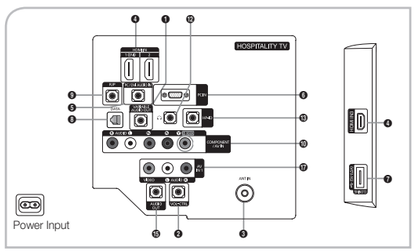

HG26EA470PW
HG32EA470PW
HG26EA473KW
HG26EA475RW
HG32EA475RW
HG37EA570LW
HG40EA570LW

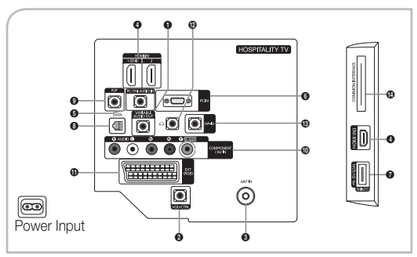

HG26AA473PW
HG32AA473PW

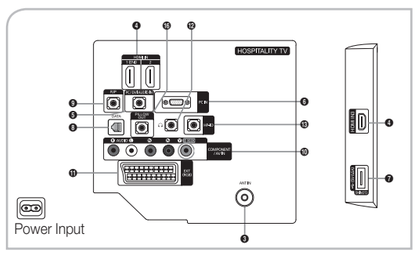

➢ Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
➢ When connecting an external device, match the color of the connection terminal to the cable.

1. VARIABLE AUDIO OUT
2. VOL-CTRL
3. ANT IN
4. HDMI IN 1(DVI), 2, 3
5. PC/DVI AUDIO IN
6. PC IN
7. USB / CLONING
8. DATA
9. RJP
10. COMPONENT IN / AV IN
11. EXT (RGB)
12. HEADPHONE JACK
13. HP-ID
14. COMMON INTERFACE
15. AUDIO OUT
16. PILLOW OUT
17. AV IN1

Connecting the TV with STB

HG22EA470UW
HG22EA473KA

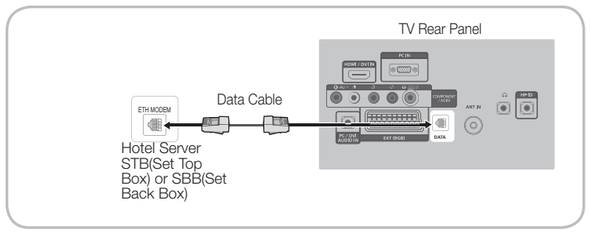

HG26EA470PW
HG32EA470PW
HG26EA473KW
HG26EA475RW
HG32EA475RW
HG37EA570LW
HG40EA570LW

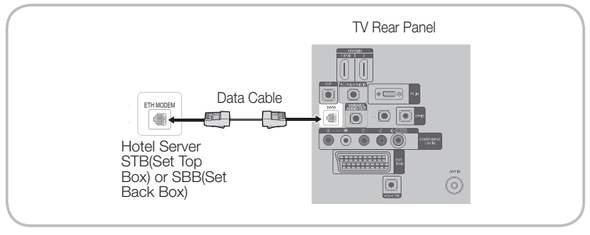

HG26AA475RW
HG32AA475RW
HG40AA570LW
(The models of supporting SCART)

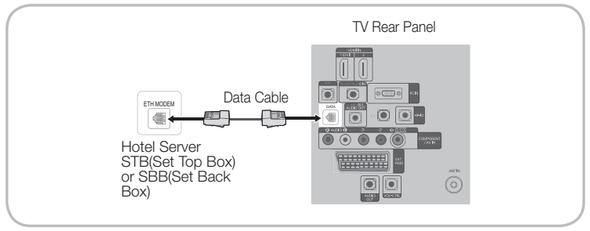

HG26AA473PW
HG32AA473PW

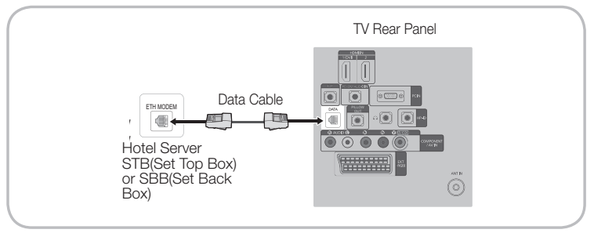

HG26AA470PW
HG32AA470PW
HG32AA570LW
HG40AA570LW
(The models of not supporting SCART)

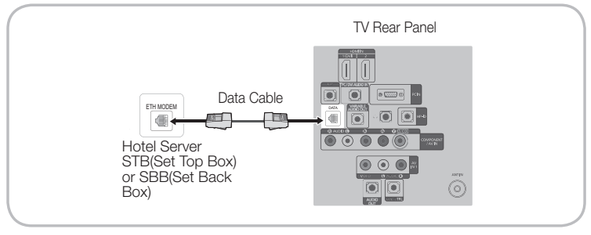

Hotel Plug & Play

Hotel Plug & Play is a function that automatically performs the Hotel mode selection, Country Setup, Clock Setup and Picture mode Setup once.

- Hotel Plug & Play is available only one time when power is first turned ON.
- After setting up first TV and Clone TV to USB
- Next TV only needs to exit Hotel Plug & Play, connect USB, then Clone USB to TV.

❑ **UI Scenario (Depending on the Region, UI Scenario is different)**

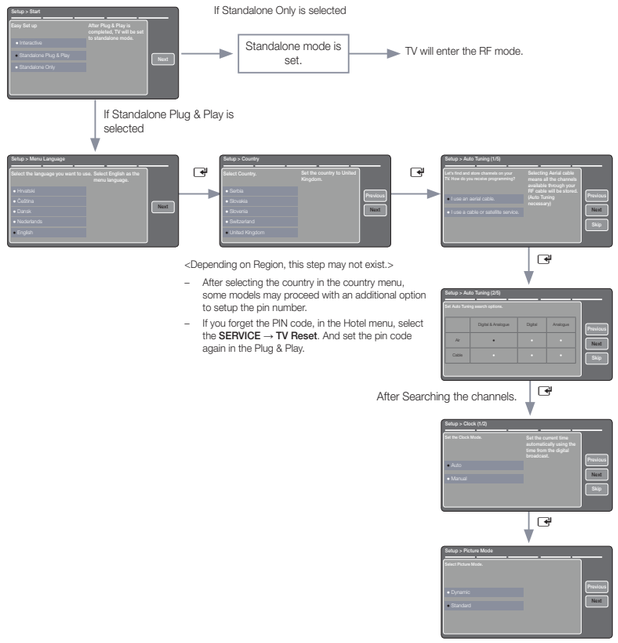
If Standalone Only is selected
Standalone mode is set.
TV will enter the RF mode.
If Standalone Plug & Play is selected
Setup > Start
Setup > Menu Language
Setup > Country
Setup > Auto Tuning (1/3)
Setup > Auto Tuning (2/3)
Setup > Clock (1/2)
Setup > Picture Mode
After Searching the channels.

<Depending on Region, this step may not exist.>

- After selecting the country in the country menu, some models may proceed with an additional option to setup the pin number.
- If you forget the PIN code, in the Hotel menu, select the **SERVICE → TV Reset**. And set the pin code again in the Plug & Play.

Specifications

Items		Specification	Comment
TV System		PAL, SECAM, DVB-TC	
Audio out	Speaker out	54 cm : 3W x 2 66 cm : 5W x 2	
		80 cm / 94 cm / 101 cm : 10W x 2	
	Variable Audio	4W mono 8 ohm SPK'	Phone Jack output BTL Sound output
	Audio out	500mVrms	Phone Jack, Monitor out
Input	Component	Y, Pb, Pr, Audio-L/R	
	PC	D-sub, Audio-L/R	
	A/V	Audio Video Jack	
	EXT	Scart Jack	
	HDMI	Compatible with the HDMI Specifications	
	Antenna	75 ohm Unbalanced, Din Jack , F Jack	VHF/UHF/CATV
Data	DATA	RJ-12	
	RJP	RS232	Jack Pack Only, TeleAdapt RJP Only
Operating temperature		10°C ~ 40°C (50°F ~ 104°F)	
Operating Humidity		10% ~ 80%	non-condensing
Storage Temperature		-20°C ~ 45°C (-4°F ~ 113°F)	
Storage Humidity		5% ~ 95%	non-condensing

✎ Design and specifications are subject to change without prior notice.

✎ For information about power supply, and more about power consumption, refer to the label attached to the product.

HDMI The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Mixed Channel Map

Mixed Channel Map is a function to mix Air and Cable channels.
[If there are no Cable channels, you can use this item as channel sorting.]

- Mixed channel Map, Channel Editor and Channel Auto Store are newly placed in Hotel Option Menu.
- Mixed channel Map should be ON in order to mix Air and Cable channels.
- Use Channel Editor to sort the channels as user-desired channel numbers.

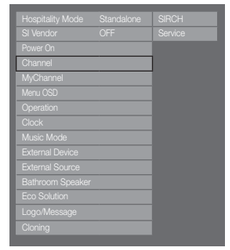

<Depending on model and region, some menu items may not exist>

Simple Steps for channel mixing under Stand-alone Mode

Step	Broad Outline
1	Turn on 'Mixed Channel Map' in Hotel Option Menu
2	Operate 'Channel Auto Store' in Hotel Option Menu (Antenna Source : Air + Cable)
3	Enter 'Channel Editor' in Hotel Option Menu
4	Compile a table related to the final channel lists you want to have
5	Rearrange channels with **TOOLS** Button based on the table you compiled
6	Press **EXIT** or **RETURN** Button to exit.
<For better comprehension, please refer to the following details>	

SAMSUNG

Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Centre ☎
AUSTRIA	800-112233
FINLAND	0771-400002
FRANCE	0825-022082
GERMANY	01805-471101
HUNGARY	0640-985985
ITALIA	800-194194
NETHERLANDS	015-2197000
POLAND	0-801-B2BSAM (222726)
PORTUGAL	808-B2BSAM
SPAIN	0902024-010
UNITED KINGDOM	+44 (0) 845 8414141
SOUTH AFRICA	0860-SAMSUNG (726-7864)
U.A.E	800-SAMSUNG (726-7864) 8000-4726